

Vergi No. 0080818425

Agha Pack

معدات معالجة وتعليب التمور
Dates processing machines

Makina Gıda Sanayi Ve Ticaret Limited Şirketi

Gaziantep, Sam mahallesi 43 Nolu Sokak No. 3/A Şehitkamil, Turkey

United State Of America, 4445 East gate mall, Suit 200 San Diego, CA 92121

www.aghapack.com

وحدة تعقيم التمور – Unit sterilization dates

وحدة تعقيم التمور AP41-Gas

وحدة تعقيم التمور جزء مهم للغاية من مصنع معالجة وتعليب التمور ، لما لها من دور كبير في تعقيم التمور وقتل جميع الحشرات واليرقات والبيض العالقة به ، قبل البدء في عمليات الغسيل والتنظيف والتعبئة ، هذه الوحدة عبارة عن حجرة اسمنتية يجب أن تكون جزء من المصنع ، لها منفذ واحد (100 × 200 سم) للدخول إليها ، ونافذة واحدة فقط بالجهة المقابلة لمنفذ الدخول وعلى ارتفاع 150 سم عن أرضية الحجرة وذات أبعاد ثابتة (40 × 40 سم) . تتم العملية بوضع المادة الفاعلة (فوسفيد المغنيزيوم أو الألمنيوم) وذلك بعد رص سلال التمور ضمن الحجرة وبتنسيق متساوي مع ترك مسافة بين الصف والأخر وضمن حرارة مقدارها 35 مئوية فوق الصفر ورتوية تتراوح بين 65 إلى 70 % ، تستمر العملية لمدة 48 ساعة متواصلة ، ثم يفرغ الغاز ويستبدل بهواء طبيعي بواسطة المروحة التوربينية ولمدة 12 ساعة ، تعرف هذه العملية بالتهوية ، هذه الطريقة بالتعقيم تكون نسبة النجاح بها 100 % ، لكنها تبقي على نسبة من المادة الفاعلة على حبات التمر مقدارها 3 إلى 4 أجزاء من المليون ، هذه النسبة مقبولة ولا تؤثر على الصحة العامة .

مكونات وحدة تعقيم التمور:

- ❖ مستلزمات حجرة التعقيم من نافذة وباب ومواد عازلة .
- ❖ مروحة توربينية 550 وات .
- ❖ حساسات رطوبة وحرارة مثبتة ضمن الوحدة .
- ❖ مؤشرات نسب الأوكسجين والمادة الفاعلة .
- ❖ لوحة تحكم رقمية للمراقبة والسيطرة .

الطاقة الإنتاجية: 18000 كجم / 60 ساعة عمل . مساحة الحجرة الإسمنتية (400 × 300 × 1000 سم) .



Unit sterilization dates AP41-Gas

Unit sterilization dates part is very important, processing dates factory, because of their significant role in the sterilization dates and kill all insects and larvae and eggs, before starting the washing, cleaning and packing operations, this unit is a concrete chamber should be part of the plant, have one port (100 × 200 cm) to enter it, one window and only interview Steering entrance to the room, and at a height of 150 cm from the floor of the chamber and with fixed dimensions (40 × 40 cm). The process is done put the active substance (phosphide magnesium or aluminum) after compaction dates baskets within the room and coordinate equal with leaving a space between the rows and in the heat of the amount of 35 C above zero and the humidity between 65 to 70%, continue the operation for 48 hours straight, then empties gas and replaces the air naturally by turbo fan for a period of 12 hours, this process is known as ventilation, this method is sterilization be a success rate of 100%, but they keep a percentage of the active substance on the beads dates the amount of 3 to 4 parts per million, the ratio acceptable and do not affect health the public.

Unit sterilization dates components:

Türkiye İş Bankası

Branch: Cumhuriyet / Gaziantep - Türkiye

Account Name: Agha Pack

Swift Code: ISBKTRIS

Account No.: TL : 6318-0034370 (IBAN: TR22 0006 4000 0016 3180 0343 70)

€ : 6318-0004446 (IBAN: TR19 0006 4000 0026 3180 0044 46)

\$: 6318-0004432 (IBAN: TR09 0006 4000 0026 3180 0044 32)


Head Office: United State Of America, Email: info@aghapack.com

Regional Office: Gaziantep, Türkiye, Email: mo.tr@aghapack.com

Sales Office: Istanbul, Türkiye, Email: sales@aghapack.com

Factory: Gaziantep, Türkiye, Email: mo@aghapack.com

Sales GSM: 0090 535 028 7728 - Factory GSM: 0090 537 286 9818

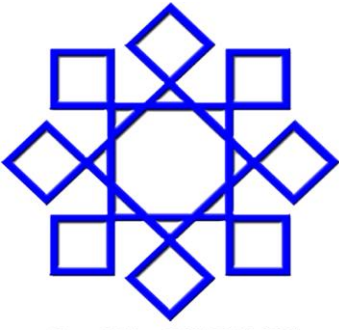

Vergi No. 0080818425

Agha Pack

معدات معالجة وتعليب التمور
Dates processing machines

Makina Gida Sanayi Ve Ticaret Limited Şirketi
Gaziantep, Sam mahallesi 43 Nolu Sokak No. 3/A Şehitkamil, Turkey
United State Of America, 4445 East gate mall, Suit 200 San Diego, CA 92121
www.aghapack.com

- ❖ Sterilization chamber accessories (window - door - insulating material).
- ❖ 550 watts of turbo-fan.
- ❖ Humidity and temperature sensors installed within the unit.
- ❖ Oxygen ratios and active substance indicators.
- ❖ A digital control panel for monitoring and control.

Production capacity: 18000 kg / 60 hours work. Room concrete space (400 x 300 x 1000 cm).

Notice

- ✓ Our machines designed by **(Agha Pack. USA.)** East Gate Mall - suite 200, CA. 92121 USA.
- ✓ Two-year warranty against badness composes.
- ✓ **Dimension maybe change except capacity.**

Agha Pack

Türkiye İş Bankası

Branch: Cumhuriyet / Gaziantep - Türkiye
Account Name: Agha Pack
Swift Code: ISBKTRIS
Account No.: TL : 6318-0034370 (IBAN: TR22 0006 4000 0016 3180 0343 70)
€ : 6318-0004446 (IBAN: TR19 0006 4000 0026 3180 0044 46)
\$: 6318-0004432 (IBAN: TR09 0006 4000 0026 3180 0044 32)

Head Office: United State Of America, **Email:** info@aghapack.com
Regional Office: Gaziantep, Türkiye, **Email:** mo.tr@aghapack.com
Sales Office: Istanbul, Türkiye, **Email:** sales@aghapack.com
Factory: Gaziantep, Türkiye, **Email:** mo@aghapack.com
Sales GSM: 0090 535 028 7728 - **Factory GSM:** 0090 537 286 9818